

Smart Connect™ App Download Information

- Some features of this product only work with the Fisher-Price® Smart Connect™ app.
- Download the Fisher-Price® Smart Connect™ app to control the swing from your smart device (not included). This app is available from the App StoreSM or Google PlayTM.
- The Smart Connect™ app is compatible with most iOS and Android devices. Please refer to the chart on the page 24 for a list of compatible devices. Device not included.

Pairing Your Device

Before using the Smart Connect™ app for the first time, you will need to pair your device with the swing.




-
- Open the Smart Connect™ app on your device. Be sure your device is within approximately six feet (1,8 meters) of the swing to pair.
 - Next, slide the swing power switch ON.
 - Then, press the pairing button on the back of the swing. The swing will stay in the pairing mode for approximately 30 seconds.

Hint: If you cannot pair your device with the swing, try moving the device closer to the swing.

- The swing icon will be highlighted in green in the app when the swing is connected to your device. This indicates that you can use your device to control the swing.

Smart Connect™ App

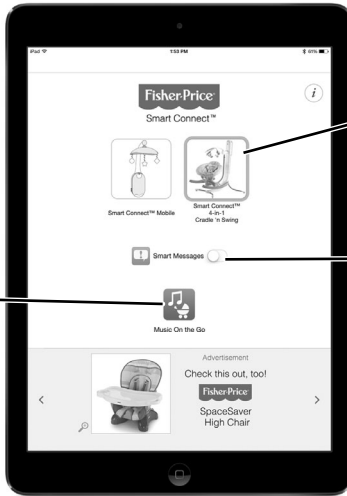


Press the swing icon to open the swing controls.

Press the Music on the Go icon to play swing songs from your device.

Press the switch icon to turn the Smart Messages ON or OFF. When Smart Messages are enabled you will receive pop-up notifications on your device to tell you the status of your swing.

Press the back icon to return to the home screen.

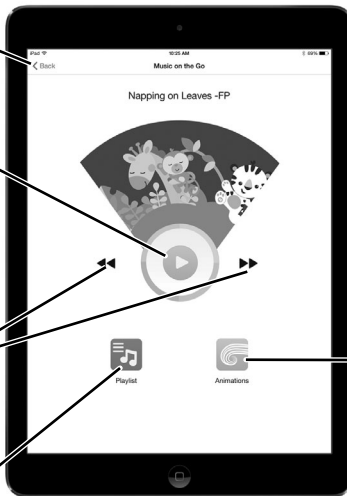

Press the play/pause icon to start or stop music.

Press the forward or reverse icons to change the song.

Press the animation icon to choose a display image for your device.

Press the playlist icon to create a custom playlist from songs on your device.

Smart Connect™ App

Press to connect or disconnect your device from the swing.

Press to customize swing name.

View your device status here: ***You're Connecting, You're Connected, You're Not Connected or Your swing is out of range, turned off or asleep.***

Press to choose how long the swing will stay on.

Press to adjust the swing speed.

Press to choose how long music/sounds will play.

Press to turn music ON. Press a music icon again to turn music OFF. Press a music icon a third time to play a different song.

Press to adjust volume level. **Hint:** Music/sound effects must be ON to use this feature.

This icon displays the battery life of your swing. When the battery icon turns red or is at 0%, use the AC adaptor as a power source or replace the batteries.

Press to turn nature sounds ON. Press the icon again to turn nature sounds OFF. Press the icon a third time to play a different nature sound.

Press to turn the mobile light ON. Press the icon again to turn the mobile light OFF.

Smart Connect™ App Compatibility

The Fisher-Price® Smart Connect™ app is compatible with the devices listed in the table.

APPLE	ANDROID
<ul style="list-style-type: none"> • iPhone (6 Plus, 6, 5S, 5C, 5 & 4S) • iPad (mini with Retina display, mini, Air, 4th & 3rd gen) or newer • iPod touch (5th gen) 	<ul style="list-style-type: none"> • Google Nexus 5, Nexus 4 • Google Nexus 7 (2013), Nexus 10 • HTC One, One Max • Motorola Droid (RAZR, Ultra, Maxx & Mini) • Motorola Moto G, X • Samsung Galaxy S3 or newer • Samsung Galaxy Tab 4, Pro, S or newer, Galaxy Note 3, Galaxy Note 8, 10.1, Pro 12.2, or newer • Galaxy Mega • Sony Xperia (SP, Z, ZR, ZL, Z1, Z Ultra HSPA+) • Sony Xperia Tablet Z

As technology changes, this app may become compatible with additional devices. Visit fisher-price.com/SmartConnect for an up to date, complete list of compatible devices.