


PAIRING YOUR DEVICE WITH THE SEAHORSE



Before using the Fisher-Price® Smart Connect™ app for the first time, pair your device (not included) with the seahorse.

Make sure your device is within 6 feet (1,8 m) of the seahorse when pairing.

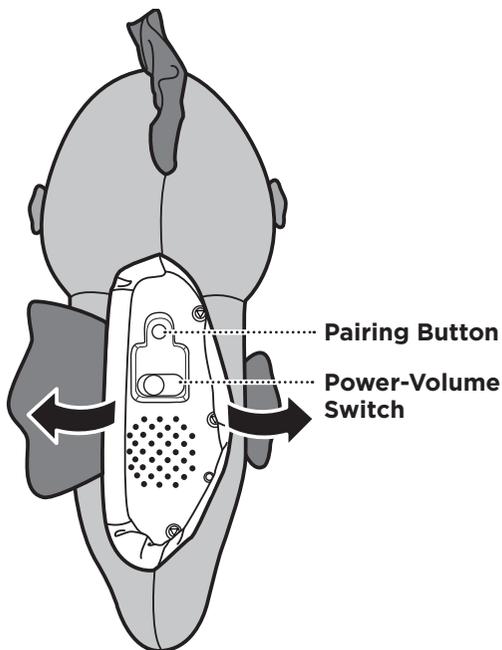

- Open the fasteners on the back of the seahorse to access the pairing button and the power-volume switch.
- Slide the power-volume switch to ON with low volume  or ON with high volume .
- Open the Fisher-Price® Smart Connect™ app on your device.
- Press the pairing button on the seahorse. Pairing may take up to 30 seconds and you'll see that you're connected in the app!
- Once you've paired your device to the seahorse, you do not need to pair again.
- If you cannot pair your device to the seahorse, try moving the device closer to the seahorse and make sure your wireless connection is enabled on your device.

SOOTHING MUSIC AND GLOWING LIGHTS!



- Squeeze seahorse's tummy to start 10 minutes of sweet, soothing lullabies along with a soft glow.
- Press and hold seahorse's tummy for about three seconds to turn off music and light. Or, open the fasteners on the back of this toy to access the power-volume switch and slide it OFF .
- If this toy begins to operate erratically you may need to reset the electronics. Slide the power-volume switch off and then back on.

FISHER-PRICE® SMART CONNECT™ APP

- This toy has more features when using with the Fisher-Price® Smart Connect™ app. The app is available on the App Store® and Google Play™.
- Be sure seahorse power is on to use the app. Now you can turn seahorse on and off with your device, make music and sounds selections, control volume and light brightness and even choose light colors and set a timer.

Touch to connect or disconnect your device.

The seahorse enters sleep mode after 25 hours of non-use. When this happens, you'll have to press seahorse's tummy.....
to wake it up. Now touch the connect button.

Touch to pause or resume lights, sounds and music.

< Menu


Soother 2 >

Seahorse Soother

 You're connected!



FISHER-PRICE® SMART CONNECT™ APP

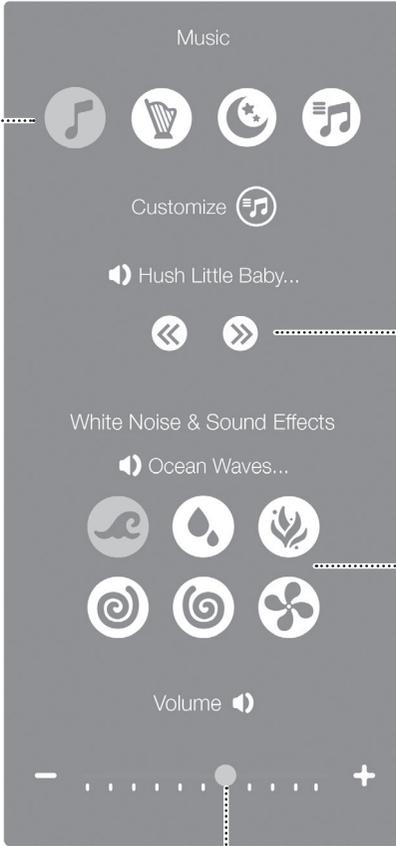


Touch to make a music selection. Choose ambient, classical, lullabies or create a custom playlist.

Touch to advance to the next song or go back to a song.

Touch to make a sound selection. Choose waves, rain, sea forest, brown noise, pink noise or fan noise. Touch again to turn sound off.

Slide to adjust the volume level.

FISHER-PRICE® SMART CONNECT™ APP

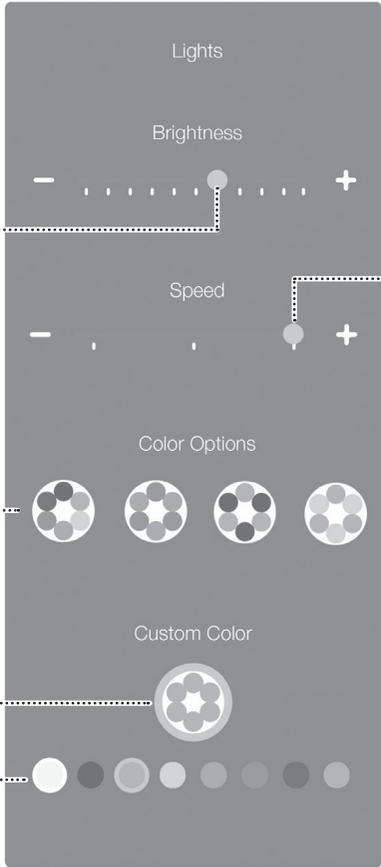


Slide to adjust light brightness.

Slide to change how fast or slow light color changes.


Touch to make a color combination selection.

Touch to create a custom color light display.

Choose up to three colors. Touch your choices.

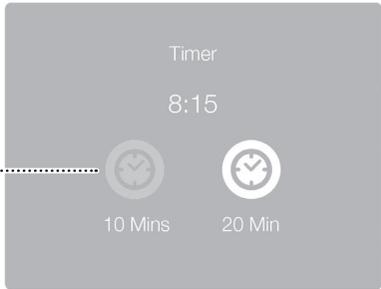

Touch to choose how long selections play.

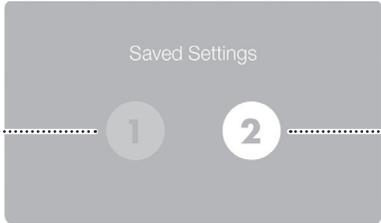

Touch to save all of your selections and create a custom setting. You can save up to two custom settings. To start a setting, touch a number icon.

Hint: To change a custom setting, touch and hold a number icon until it flashes. Then make selections and touch the same number icon again to save.