

Fisher-Price® Smart app

- Some features of this product only work with the Fisher-Price® Smart app. With the app, you can make soothing selections for the sleeper with your device. Choose how long you would like rocking/vibration/music/sounds to stay on. And, you can create up to two customized settings for rocking, vibration, music, sound effects and timing.
- Scan the QR code below with your smart device (not included) to download the Fisher-Price® Smart app.



- You can also visit www.fisherpricesmart.com/download to download the Fisher-Price® Smart app to your device.
- After downloading, launch the app and be sure to follow the app instructions to connect your device to the product.
- The Fisher-Price® Smart app is compatible with most iOS and Android™ devices. Visit www.fisherpricesmart.com/download for an up-to-date complete list of compatible devices.

Pairing Device and Product

Before using the Fisher-Price® Smart app for the first time, pair your device (not included) with this product.



- Open the Fisher-Price® Smart app on your device. Be sure your device is within approximately 1,8 meters of the product to pair.
 - Press and hold the power button on the product for about five seconds to pair it with your device.
- Hint:** *If you cannot pair your device with the product, try moving the device closer to the product.*


Use

Make sure your child is properly secured in the sleeper.

Press the sound selection button to turn music on. Press the same button again to change to a sound effect. Press and hold the sound selection button to turn music/sounds off.

Press this volume button to turn the volume level up.

Press the power button to turn the power ON or OFF.

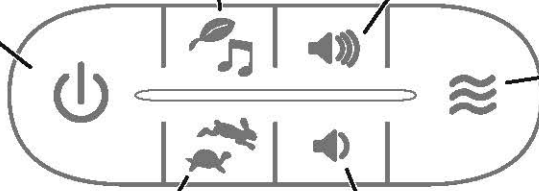

Press the vibration button to turn on soothing vibrations. Press the button again to turn vibrations off.

Press the speed button to turn on auto-rock in low speed. Press the button again to turn on auto-rock in high speed. Press the button again to turn auto-rock off.

Press this volume button to turn the volume level down.

- The buttons light up when power is on.
- Music/sounds time out after approximately 30 minutes. Press the sound selection button to restart music/sounds.
- If this product begins to operate

erratically, you may need to reset the electronics. Unplug the AC adapter and plug it back in.