

# Fisher-Price®

## DYW47



 
Read these instructions before use of this product and keep them for future reference as they contain important information. Product features and decorations shown in photographs and illustrations may vary from your product.

[fisher-price.com](http://fisher-price.com)

# Consumer Information

- Requires an AC adapter (input 100-240 VAC, 50/60Hz; output: 6 VDC, 500 mA) for operation (included).
- Always use the this product where there is adequate ventilation. To prevent overheating, keep the product away from heat sources such as radiators, heat registers, direct sunlight, stoves, amplifiers, or other appliances which produce heat.
- Never use extension cords with the AC adapter.
- Never use the product near water (ie.: bathtub, sink, laundry tub or wet basement, etc.).
- Do not connect to more than the recommended number of power supplies.
- The product must only be used with the recommended AC adapter.
- Disconnect the AC adapter from the product before cleaning.
- The AC adapter is not a toy.
- The product is not a toy.
- The LEDs (lights) in this product are not replaceable. When the LEDs reach end of life, replace the entire product.
- Contains Transmitter Module FCC ID: CCT-CBV76-14, IC: 4390A-CBV76

## AC Adapter Use

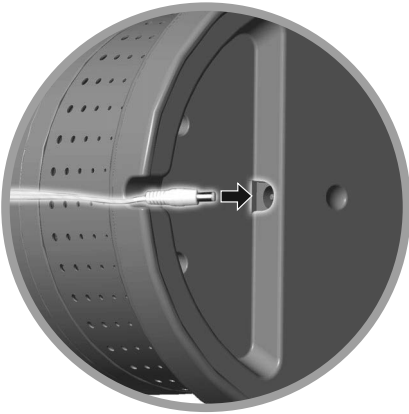

- Place the soother near a standard wall outlet.
- Plug the AC adapter cord into the socket in the bottom of the soother.
- Plug the AC adapter into the wall outlet.
- Use the AC adapter only in a wall outlet. Do not plug the adapter into a ceiling outlet.
- If this product begins to operate erratically, you may need to reset the electronics. Unplug the AC adapter for approximately 10 seconds and plug it back in.



Protect the environment by not disposing of this product or any batteries with household waste. This symbol indicates that this product shall not be treated as household waste. Check your local authority for recycling advice and facilities.



### **UNITED STATES**

877-219-8335. Fisher-Price, Inc.,  
636 Girard Avenue, East Aurora, NY 14052.  
Hearing-impaired consumers:  
1-800-382-7470.

### **GREAT BRITAIN**

Mattel UK Ltd, Vanwall Business Park,  
Maidenhead SL6 4UB. Helpline: 01628  
500303; [www.service.mattel.com/uk](http://www.service.mattel.com/uk).

Mattel Europa B.V., Gondel 1, 1186 MJ  
Amstelveen, Nederland.

### **CANADA**

Mattel Canada Inc., 6155 Freemont Blvd.,  
Mississauga, Ontario L5R 3W2.

### **AUSTRALIA**

Mattel Australia Pty. Ltd., 658 Church Street,  
Locked Bag #870, Richmond, Victoria 3121  
Australia. Consumer Advisory Service  
1300 135 312.

### **NEW ZEALAND**

16-18 William Pickering Drive, Albany 1331,  
Auckland.

### **ASIA**

Mattel East Asia Ltd., Room 503-09, North  
Tower, World Finance Centre, Harbour City,  
Tsimshatsui, HK, China. Tel.: (852) 3185-6500.

### **MALAYSIA**

Diimport & Diedarkan Oleh: Mattel Southeast  
Asia Pte. Ltd., No 19-1, Tower 3 Avenue 7,  
Bangsar South City, No 8, Jalan Kerinchi,  
59200 Kuala Lumpur, Malaysia.  
Tel: 03-78803817, Fax: 03-78803867.

### **SOUTH AFRICA**

Mattel South Africa (PTY) LTD, Office 102 I3,  
30 Melrose Boulevard, Johannesburg 2196.



Apple and the Apple logo are trademarks of Apple Inc., registered in the U.S. and other countries.  
App Store is a service mark of Apple Inc., registered in the U.S. and other countries.

Google Play and the Google Play logo are trademarks of Google Inc.

 
©2017 Mattel. All Rights Reserved. © and ™ designate U.S. trademarks of Mattel, except as noted.

# Fisher-Price® Smart Connect™ App

- Some features of this product only work with the Fisher-Price® Smart Connect™ app.
- Download the Fisher-Price® Smart Connect™ app to control the sleeper from your smart device (not included). The app is available on the App Store® and Google Play™.
- The Smart Connect™ app is compatible with most iOS and Android™ devices. Please refer to the chart for a list of compatible devices. Device not included.

 
## Pairing Your Device with Soother

Before using the Fisher-Price® Smart Connect™ App for the first time, pair your device (not included) with the soother.

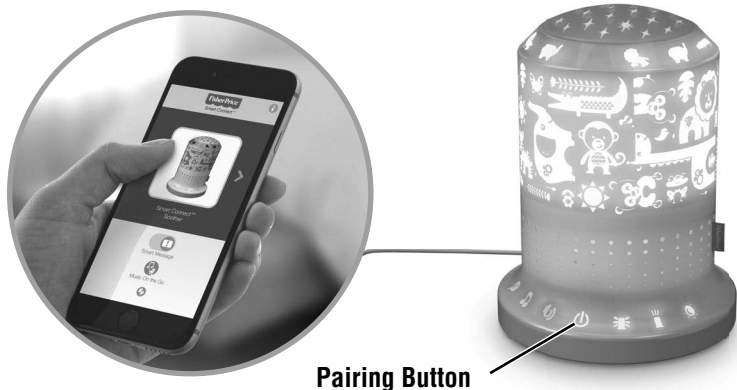




 


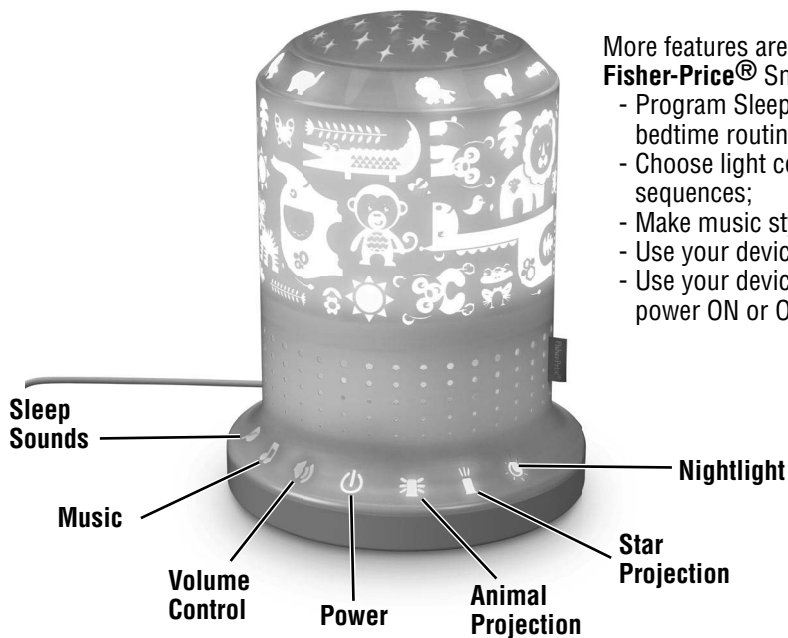
- Open the Fisher-Price® Smart Connect™ App on your device. Be sure your device is within approximately 1,8 meters of the soother to pair.
  - Press and hold the pairing button (the power button)  on the soother for 5 seconds to pair it with your device. Once paired, you'll see a green button light on your device.
- Hint:** *If you cannot pair your device with the soother, try moving the device closer to the product.*

# The soother of your dreams ....



More features are available using the **Fisher-Price® Smart Connect™ App**

- Program Sleep Stages for baby's bedtime routine;
- Choose light colors, brightness and sequences;
- Make music style selections;
- Use your device to control volume;
- Use your device to turn soother power ON or OFF.

-  Touch the **power button** to turn ON. Touch again to turn power OFF. When you turn power back on, the soother recognizes the most recent music/sounds/light selections.
-  Touch the **sleep sounds button** to turn on soothing sounds. Touch again to change the sound. Each touch advances to a different sound: Pink Noise, Brown Noise, Womb Sounds, Ocean Waves, Nature or Wind. Press and hold this button to turn off sounds.
-  Touch the **music button** to turn on gentle music. Touch again to change to a different music selection. Each touch advances to a different music selection. Press and hold this button to turn off music.
-  Touch the **volume button** to increase volume. Touch again and again to increase volume level and then turn volume off. Your next touch sets volume at it's lowest level again. Press and hold this button to turn volume off.
-  Touch the **animal projection button** to turn on enchanting projection. Touch again to turn projection off.
-  Touch the **star projection button** to turn on multi-colored projection. Touch again to turn projection off.
-  Touch the **nightlight button** to turn on a soft, amber nightlight. Touch again to turn the nightlight off.

# Fisher-Price® Smart Connect™ App

View your device status here. Touch to disconnect. Touch again to connect.

Touch to start your selections. Touch again to turn off.

Touch to make Sleep Stages selections and turn on.

Touch a tab to make customized selections for Animal Projection, Star Projection, Night Light, Music, Sound Effects and Timers.

Reset all Settings

 
Touch to reset customized settings.




# Animal Projection



Touch to turn on animal projection.

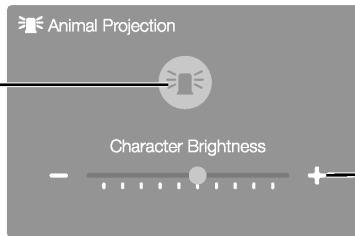

 
Slide to increase or decrease projection brightness.

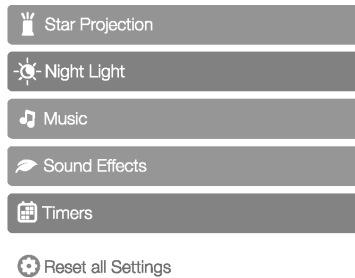





# Star Projection

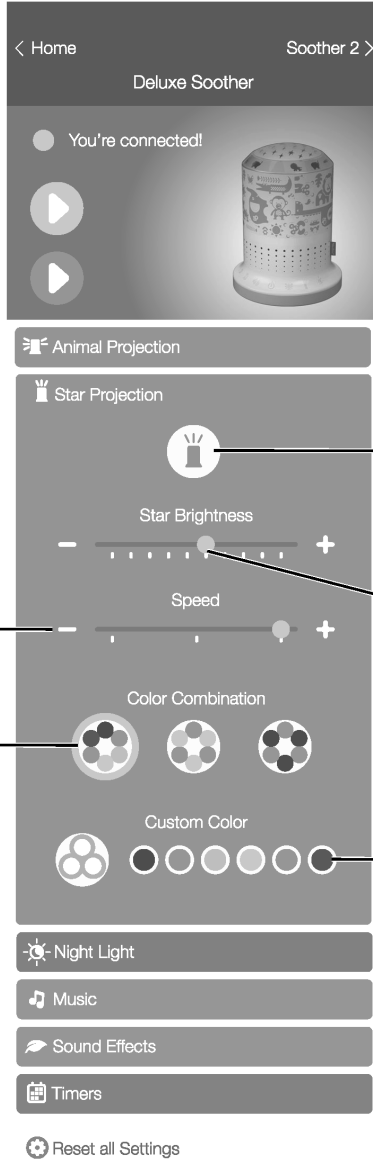 

< Home

Soother 2 >

Deluxe Soother

You're connected!



Animal Projection

Star Projection



Touch to turn on star projection.

Star Brightness



Slide to increase or decrease projection brightness.

Speed



Slide to choose color change speed.

Color Combination



Touch to choose preset color combinations: all colors, blue and green or yellow and red.

Custom Color



Touch any three colors to create your own custom setting.

Night Light


Music

Sound Effects

Timers

Reset all Settings

# Night Light



The screenshot shows the 'Deluxe Soother' app interface. At the top, there are navigation arrows for '< Home' and 'Soother 2 >'. Below this is the title 'Deluxe Soother'. A status indicator shows a grey circle and the text 'You're connected!'. To the right is an image of the Deluxe Soother device. Below the image are two play buttons. The main settings area includes: 'Animal Projection', 'Star Projection', 'Night Light' (with a sun/moon icon), a brightness slider with a circular toggle, 'Music', 'Sound Effects', 'Timers', and 'Reset all Settings' (with a gear icon).

Touch to turn on night light.

Slide to increase or decrease projection brightness.

# Music

The screenshot shows the Music app interface for a 'Deluxe Soother'. At the top, there are navigation options '< Home' and 'Soother 2 >'. Below this is the device name 'Deluxe Soother' and a status 'You're connected!' with a grey dot. A large play button is on the left, and an image of the soother is on the right. Below are three feature buttons: 'Animal Projection', 'Star Projection', and 'Night Light'. The 'Music' section is highlighted, showing 'Six Lil Ducks' as the current playlist. It features a 'Settle Music' section with a gear icon and a row of five numbered buttons (1-5). Below that is a 'Soothing Music' section with a wave icon and another row of five numbered buttons (1-5). A volume slider is located below the Soothing Music buttons. At the bottom are 'Sound Effects', 'Timers', and 'Reset all Settings' buttons.

< Home Soother 2 >

Deluxe Soother

You're connected!

Animal Projection

Star Projection

Night Light

Music Six Lil Ducks

Settle Music

Touch to turn on Settle music.

Touch and hold to remove a song from the playlist.

Touch a number to immediately start that song.

Soothing Music

Touch a number to immediately start that song. Touch and hold to remove that song from a playlist.

Volume

 
Slide to increase or decrease volume.

Sound Effects

Timers

Reset all Settings


# Sleep Sounds

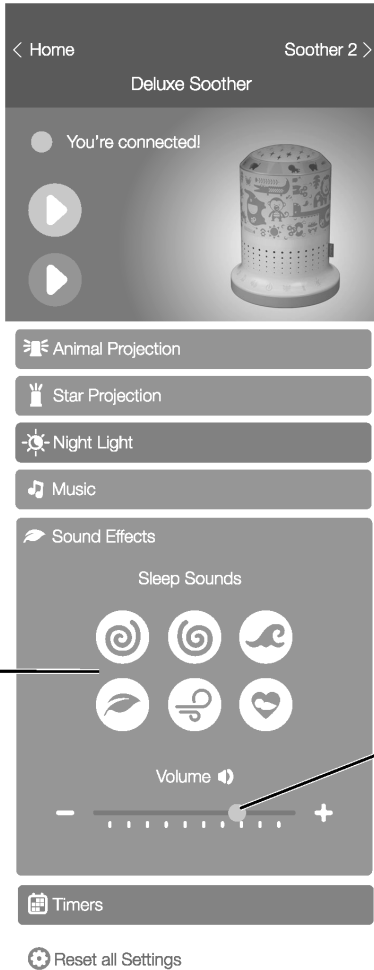

Touch a button for Pink Noise, Brown Noise, Womb Sounds, Ocean Waves, Nature or Wind sounds.

Slide to increase or decrease volume.

# Timers

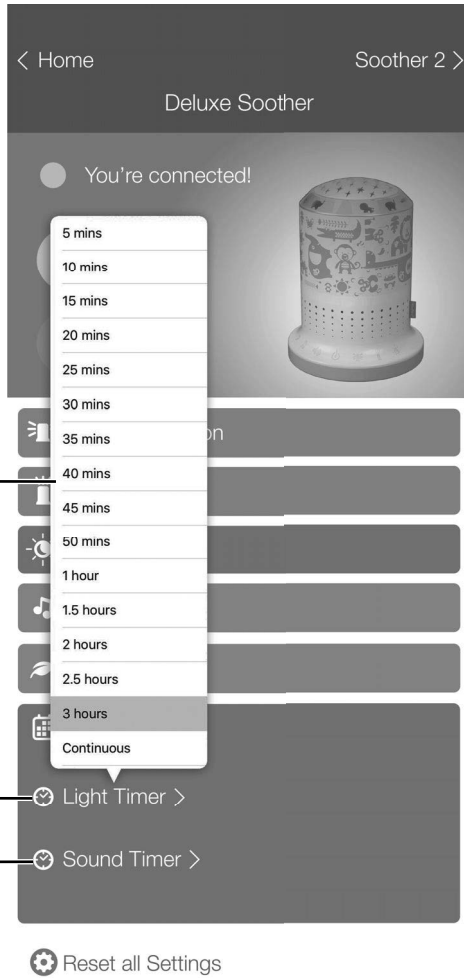 

Touch from 5 minutes to continuously on.

Touch to choose how long you would like animal projection, star projection or night light to be on.


Touch to choose how long you would like music or sounds to be on.



# Sleep Stages

 **Hint:** When in Sleep Stages mode, you cannot modify music, sounds or lights.

**Hint:** In this mode, the buttons on the soother will blink in sequence.

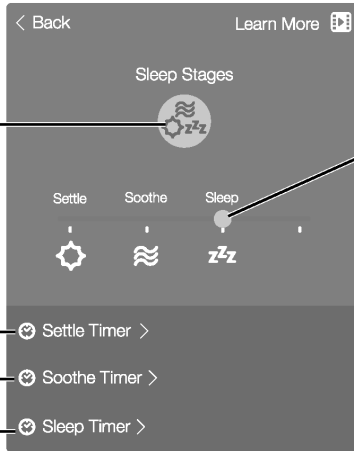

Touch to turn on Sleep Stages. The soother progresses through Sleep Stages selected below.

Keep the slider on Settle for three Sleep Stages (Settle, Soothe and Sleep); move it to Soothe for two Sleep Stages (Soothe and Sleep) or move it Sleep.

Touch to choose how long you would like each selected stage to be on.

# Fisher-Price® Smart Connect™ App Compatibility

Visit [fisher-price.com/SmartConnect/](http://fisher-price.com/SmartConnect/) for a full list of compatible devices.

APPLE®	ANDROID™
<ul style="list-style-type: none"><li>• iPhone® 4s or newer</li><li>• iPad® (mini with Retina display, mini, air, 4th &amp; 3rd gen)</li><li>• iPod touch® (5th gen)</li></ul>	<ul style="list-style-type: none"><li>• Google Nexus 4, Nexus 5, Nexus 6</li><li>• Google Nexus 7 (2013), Nexus 10</li><li>• HTC One, One Max</li><li>• Motorola Droid (RAZR, Ultra, Maxx &amp; Mini)</li><li>• Motorola Moto G, X</li><li>• Samsung Galaxy S3 or newer</li><li>• Samsung Galaxy Tab 4, Pro, S or newer</li><li>• Galaxy Note 3, Galaxy Note 8, 10.1, Pro 12.2, or newer</li><li>• Galaxy Mega</li><li>• Sony Xperia (SP, Z, ZR, ZL, Z1 &amp; Z Ultra HSPA+)</li><li>• Sony Xperia Tablet Z</li><li>• LG G4</li></ul>

**Adults Note:** If you use this product with the AC adapter, periodically examine the AC adapter for damage to the cord, housing or other parts that may result in the risk of fire, electric shock or injury. If the AC adapter is damaged, do not use the product with the AC adapter.

# Consumer Information

## **FCC STATEMENT (UNITED STATES ONLY)**

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

NOTE: Changes or modifications not expressly approved by the manufacturer responsible for compliance could void the user's authority to operate the equipment. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. End users must follow the specific operating instructions for satisfying RF exposure compliance. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

## **CAN ICES-3 (B)/NMB-3 (B)**

Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

L'utilisation de ce dispositif est autorisée seulement aux conditions suivantes : (1) il ne doit pas produire de brouillage et (2) il doit pouvoir tolérer tout brouillage radioélectrique reçu, même si ce brouillage est susceptible de compromettre son fonctionnement.